Salvo™

SGL Operation Procedure



Step 1 Obtain the red gladhand with the key code pertaining to the correct



loading dock.



Remove the red emergency air line connection on the front of the semitrailer.



Step 3 Apply the Salvo gladhand by vertically inserting the head of the SGL into the coupling.



Step 4 Push forward and squeeze the two buttons on the sleeve of the gladhand to engage.



Step 5

Step 2

While the buttons are pressed, turn the key counter-clockwise to remove the key from the gladhand.



Step 6

Safe loading/unloading can take place once the removed key has been inserted into the Salvo control panel or door lock.



Step 7

When loading/unloading is complete, and the key is removed from the Salvo control panel or door lock, insert the key into the gladhand and turn the key clockwise to remove the gladhand from the coupling.

NOTE: While every effort has been made to ensure the accuracy of the information provided, no liability can be taken for any errors or omission. Kirk Key Interlock LLC. reserves the right to alter specifications and introduce improvements without prior notice.